

#### **INSTALLATION INSTRUCTIONS**

SURFACE MOUNT
ADJUSTABLE SPOTLIGHT





#### READ ALL SAFETY INSTRUCTIONS FIRST

- > Follow instructions carefully, failure to do so will void warranty.
- > Ensure installation complies with local law and applicable standards.
- > Input voltage is 120-277 V AC, 50/60 Hz
- > Only use Lumascape power supply, control equipment and leader cables.
- > Ensure mains input power is surge protected.

- > Never make connections whilst the power is connected.
- > Do not make modifications or alter the product.
- > Keep luminaire and connections clean and free of debris and moisture.
- > It is the installers responsibility that the installation is adequately sealed to avoid moisture ingress.



#### **INSTALLATION INSTRUCTIONS**

SURFACE MOUNT
ADJUSTABLE SPOTLIGHT





## Wire Up Terminal Block

Connect the cables from the LED driver to the terminal block on the base plate.

# 4 0 To Light Engine Colour Designation Blue Neutral Earth Green Brown Orange Data or Grey


## Install Cable Gland

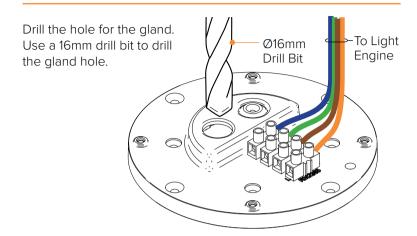

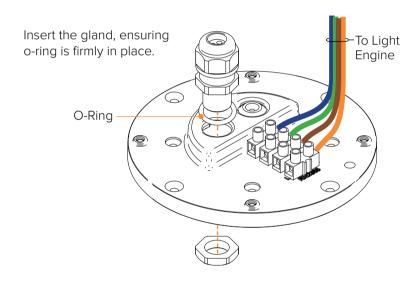

Feed supply cable through gland and tighten. Outer diameter of cable should be Ø5-10mm. Connect supply cable to terminal block.

Conductor colours shown are for a standard Lumascape leader cable.

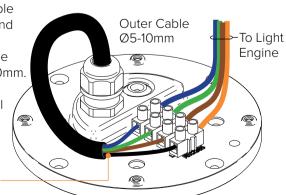

**LUMASCAPE ASIA PACIFIC** Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com




#### **INSTALLATION INSTRUCTIONS**

SURFACE MOUNT
ADJUSTABLE SPOTLIGHT




### Mount Luminaire Base Plate

Bolt luminaire to mounting surface.

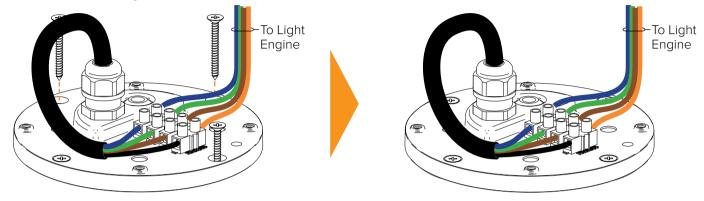

## Close Luminaire

## Aim Luminaire

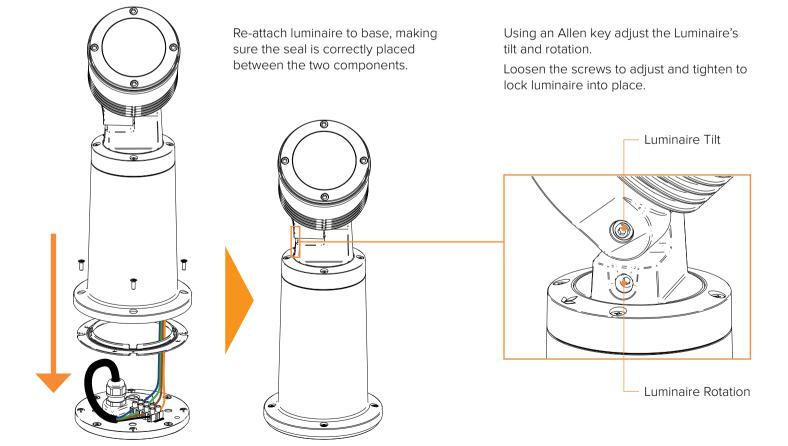

**LUMASCAPE ASIA PACIFIC** Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com