

INSTALLATION INSTRUCTIONS

REMOTE DRIVER SURFACE MOUNT ADJUSTABLE SPOTLIGHT





READ ALL SAFETY INSTRUCTIONS FIRST

- > Follow instructions carefully, failure to do so will void warranty.
- > Ensure installation complies with local law and applicable standards.
- > Input voltage is 24 V DC
- > Only use Lumascape power supply, control equipment and leader cables.
- > Ensure mains input power is surge protected.


- > Never make connections whilst the power is connected.
- > Do not make modifications or alter the product.
- > Keep luminaire and connections clean and free of debris and moisture.
- > It is the installers responsibility that the installation is adequately sealed to avoid moisture ingress.



INSTALLATION INSTRUCTIONS

REMOTE DRIVER SURFACE MOUNT ADJUSTABLE SPOTLIGHT



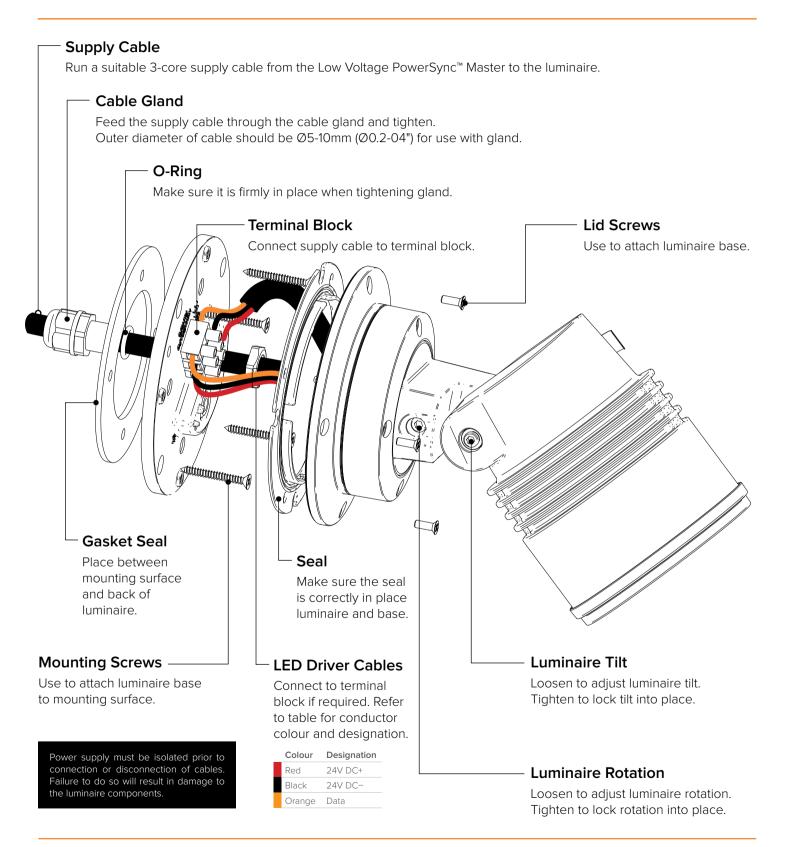

LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com