







Product warranty is void if product is not installed as per installation instructions and in compliance with all local and provincial codes.







DO NOT TOUCH

READ ALL SAFETY INSTRUCTIONS FIRST


- > Follow instructions carefully; failure to do so will void warranty.
- > Qualified personnel must install product in a manner consistent with its intended use and incompliance with all local laws and provincial codes.
- $\,\,^{>}$ Follow all product label information and installation instructions.
- > Qualified personnel must perform all servicing of this product.
- > Turn off power at fuse or circuit breaker before installation or servicing.
- > The use of damaged components may cause an unsafe condition and void the product warranty.
- $\,\,{}^{\backprime}$ Do not block light emanating from the product in whole or part.
- Never operate the luminaire with a missing or damaged lens. The lens must be cleaned on a regular basis.
- > Portions of the luminaire may become extremely hot. Do not touch the hot lens or luminaire body. Do not touch the light source at any time.
- > Keep all gaskets and sealing surfaces clean during installation and servicing; failure to do so may lead to premature failure of the product.



BOLLARDS & PATHWAYS

Product Overview

- > Suitable for mounting within 4' (1.2 m) off the ground.
- > Vapor barrier must be suitable for 194 °F (90° C)
- > For use in non-fire rated installations only
- > Not for use in environmental air handling spaces

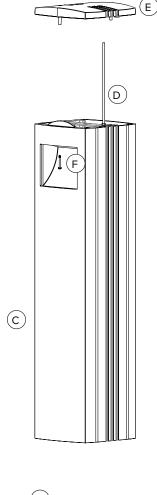

COMPONENT LIST

Α	Isolator
В	Mounting Base
С	Bollard
D	Threaded Rod
E	Top Cap
F	Set Screw



Tools Required

Installation: %16", 7/16" wrench or socket, and 5/32" Allen wrench

Servicing: #2 Phillips screwdriver






Installation Instructions

Step 1

Assemble the install base, isolator and 3/8" anchor bolts (included) to prepare for installation in a concrete base.

Aim the small arm section of each anchor bolt outward to create a star pattern for the strongest installation.

Be sure to follow local codes and structural guidelines for sizing of the concrete foundation.

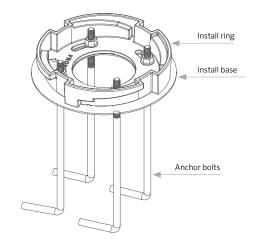


Step 2 & 3

Plumb conduit/cabling through the center of the install base.

Reduce gap.

Ensure the base and install isolator are flush with the concrete surface.

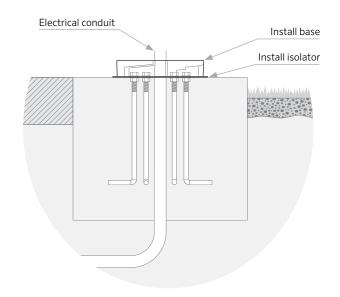




Installation Instructions (cont'd)

Step 4


Align arrow in the desired lighting direction.

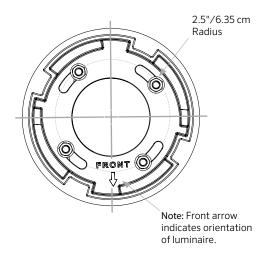


Step 5

Carefully support the luminaire while connecting the wires. Be sure to use the appropriate wiring chart and approved wire connectors.

Wiring Chart (North America)

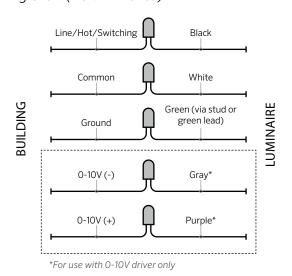

Wiring Chart (International)

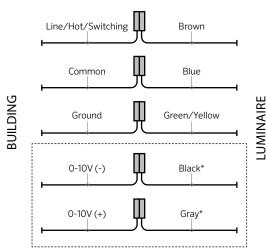

*For use with 0-10V driver only






Installation Instructions (cont'd)

Step 6, 7 & 8

Lift the luminaire assembly and lower it onto the mounting base assembly.


Align the four tabs in the bottom of the bollard with the grooves in the install base.

Hand-turn the main assembly clockwise 45° until the main assembly locks in place.

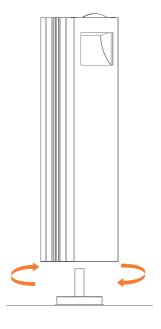

Step 8

Lock the main assembly in place by tightening the 1/4" install rod at the top of the main assembly until it bottoms out on the mounting base.

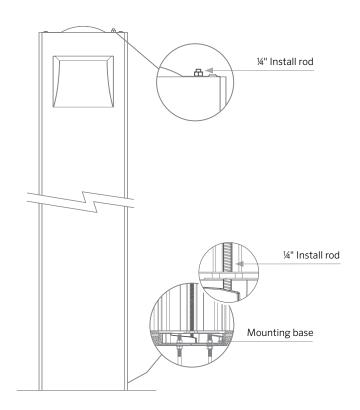


BOLLARDS & PATHWAYS

Installation Instructions (cont'd)


Step 9

Place the cap on top of the main assembly.

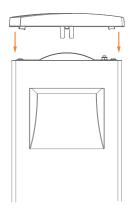

Step 10

Hand-turn the cap clockwise until the tabs engage and lock the cap in place.

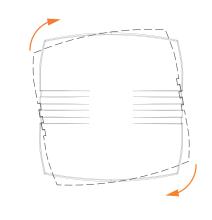

Step 11

Using a $\frac{5}{22}$ " Allen wrench, tighten the 10-32 setscrew at the underside of the light opening to lock the top cap in place.

