


GENERATION 2



Product Warranty is void if product is not installed as per installation instructions and in compliance with the local electrical code.

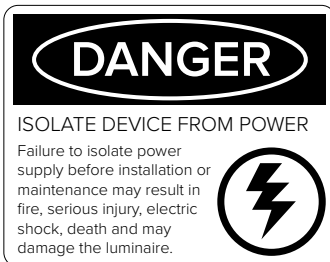

NO POWER
TOOLS



DO NOT USE SILICONE
ON OUTSIDE SURFACE



KEEP ELECTRONICS FREE
FROM DIRECT AND MOISTURE



DO NOT HOSE OR
PRESSURE CLEAN

READ ALL SAFETY INSTRUCTIONS FIRST

- › Follow instructions carefully; failure to do so will void warranty.
- › Ensure installation complies with local laws and applicable standards
- › Only use Lumascape power supply, control equipment and leader cables.
- › Ensure mains input power is surge protected.
- › Never make connections whilst power is connected.
- › Do not make modifications or alter product.
- › Connectors are to be kept clean and dry at all times.
- › Once installed, all connectors are to be mated and a PowerSync™ terminator is required on the last fitting of run.

Products and specifications are subject to change without notice.
IN0226-210823

GENERATION 2

Table of Contents

Mode Switch and Indicator Light Descriptions2

Wiring for DMX Controllers

 International3

 North America.....4

Wiring for 0-10 V Sinking Dimmers

 International5

 North America.....6

Wiring for Sourcing Dimmers

 International7

 North America.....8

Testing Functions.....9

Network Installation..... 10

GENERATION 2


Mode Switch and Indicator Light Descriptions

10 Position Mode Switch

Label	Descriptions
0	DMX/RDM
1	DMX/RDM + Relay
2	Test All Channels Off
3	Test All Channels On
4	Test 4 Color Cycle
5	0-10 V Sourcing
6	0-10 V Sinking
7	CRM (Optional)
8	USB
9	Firmware Update

NOTE:

- This function list is ONLY for Generation 2 PowerSync Injectors.
- For non-generation 2 devices, visit Lumascape website for applicable instructions.
- Generation 2 is marked on the label inside the PowerSync Injector.

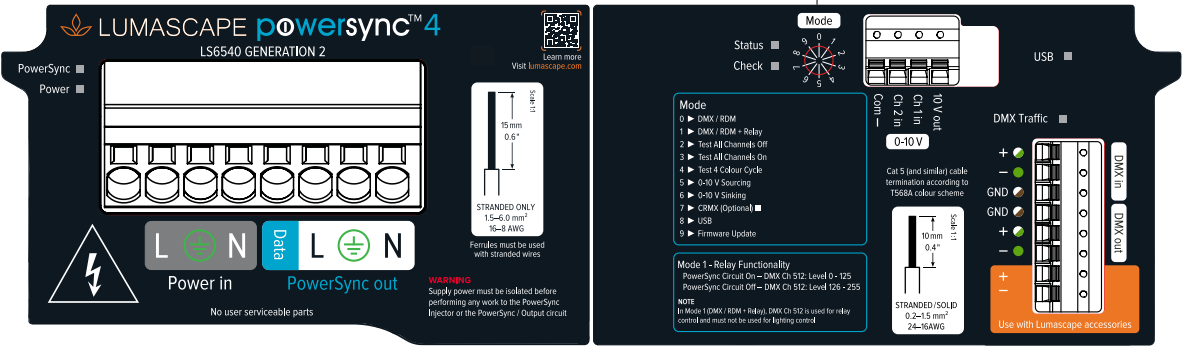

Indicator Light

LED Indicator	Event	Appearance	Note
Power	Main Input Power	Illuminates	
PowerSync™	PowerSync™ output enabled	Illuminates	
Status	Start Up	3 flashes	
	Normal Operation	1 flash, every 5 seconds	
	Circuit Fault: Over Voltage	2 flashes, every 5 seconds	
	PowerSync™ Fault	4 flashes, every 5 seconds	
Check	Start Up	On	
	Normal Operation	Off	
	Relay Open: Fault Detected	On	
	Relay Open: Manual Override	Flashing	
USB	USB Connected	Illuminates / flashes with data	
DMX Traffic	DMX Traffic Detected	Flashing with DMX frames	

GENERATION 2


Wiring for DMX Controllers (International)

10 Position Mode Switch

Label	Descriptions
0	DMX/RDM
1	DMX/RDM + Relay
2	Test All Channels Off
3	Test All Channels On
4	Test 4 Color Cycle

NOTE:

- This function list is ONLY for Generation 2 PowerSync Injectors.
- For non-generation 2 devices, visit Lumascape website for applicable instructions.
- Generation 2 is marked on the label inside the PowerSync Injector.

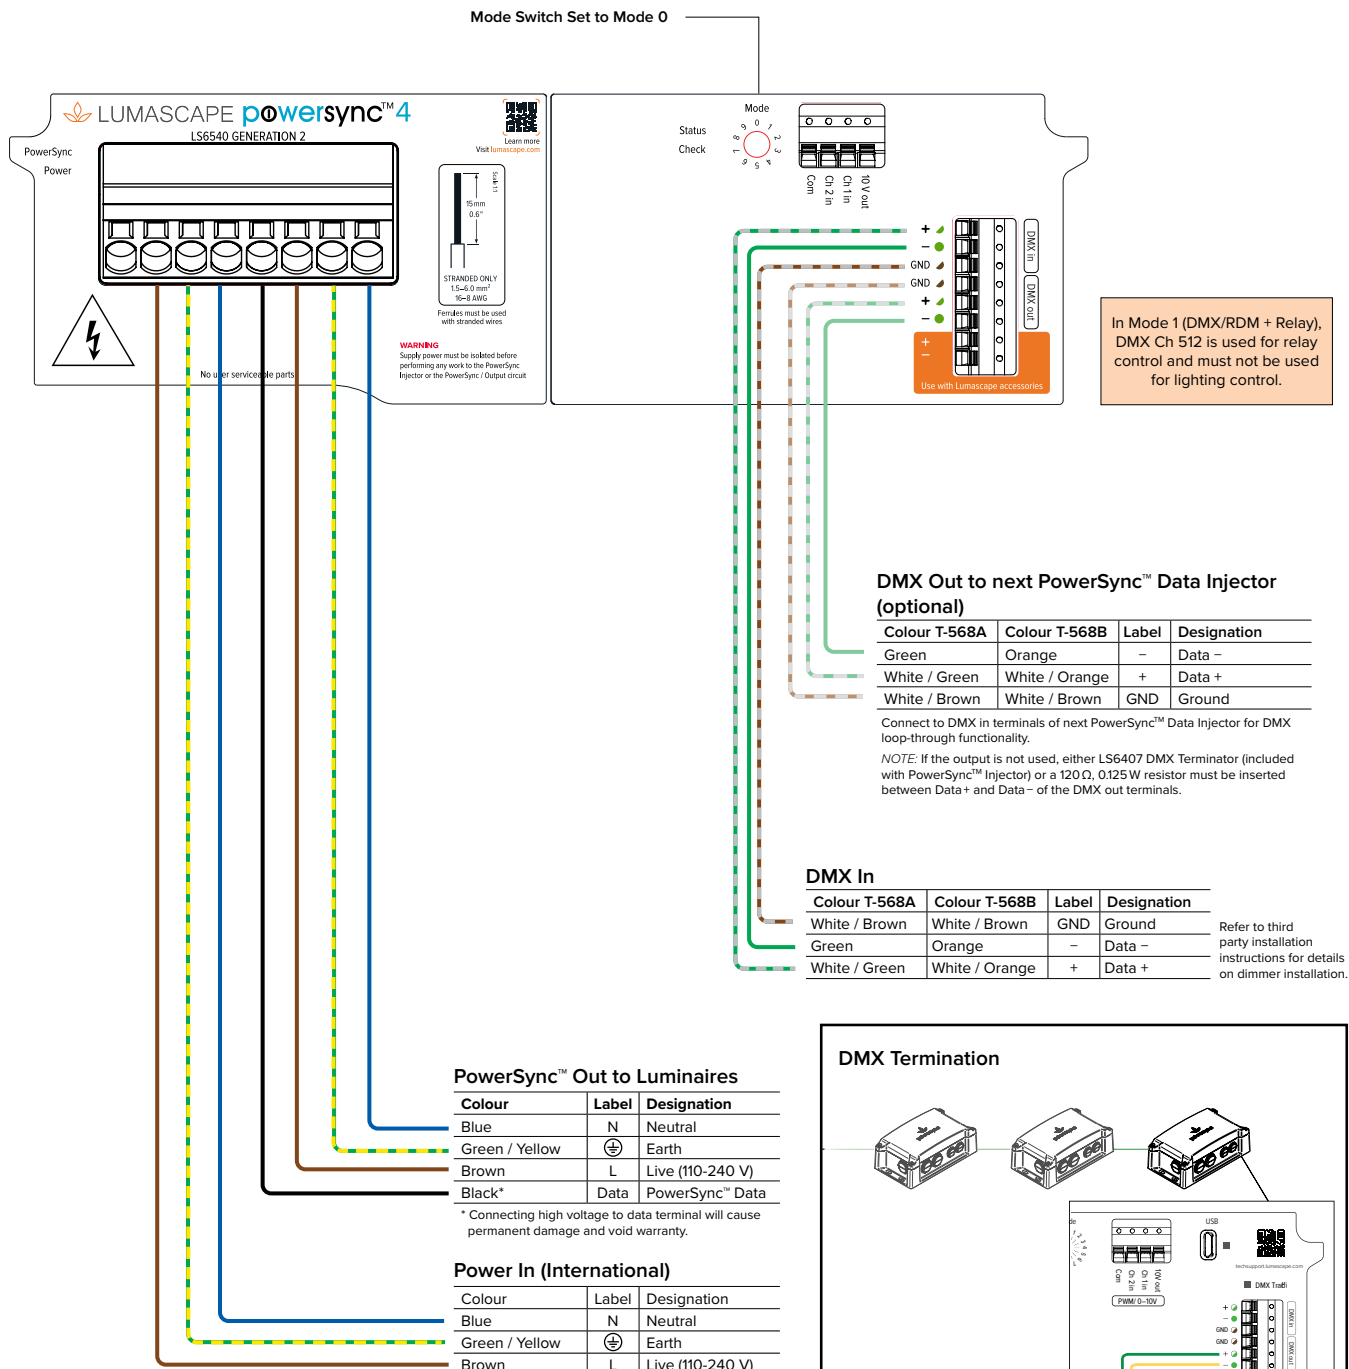


GENERATION 2

Wiring for DMX Controllers (North America)

10 Position Mode Switch

Label	Descriptions
0	DMX/RDM
1	DMX/RDM + Relay
2	Test All Channels Off
3	Test All Channels On
4	Test 4 Color Cycle

- NOTE:**
- This function list is ONLY for Generation 2 PowerSync Injectors.
 - For non-generation 2 devices, visit Lumascape website for applicable instructions.
 - Generation 2 is marked on the label inside the PowerSync Injector.

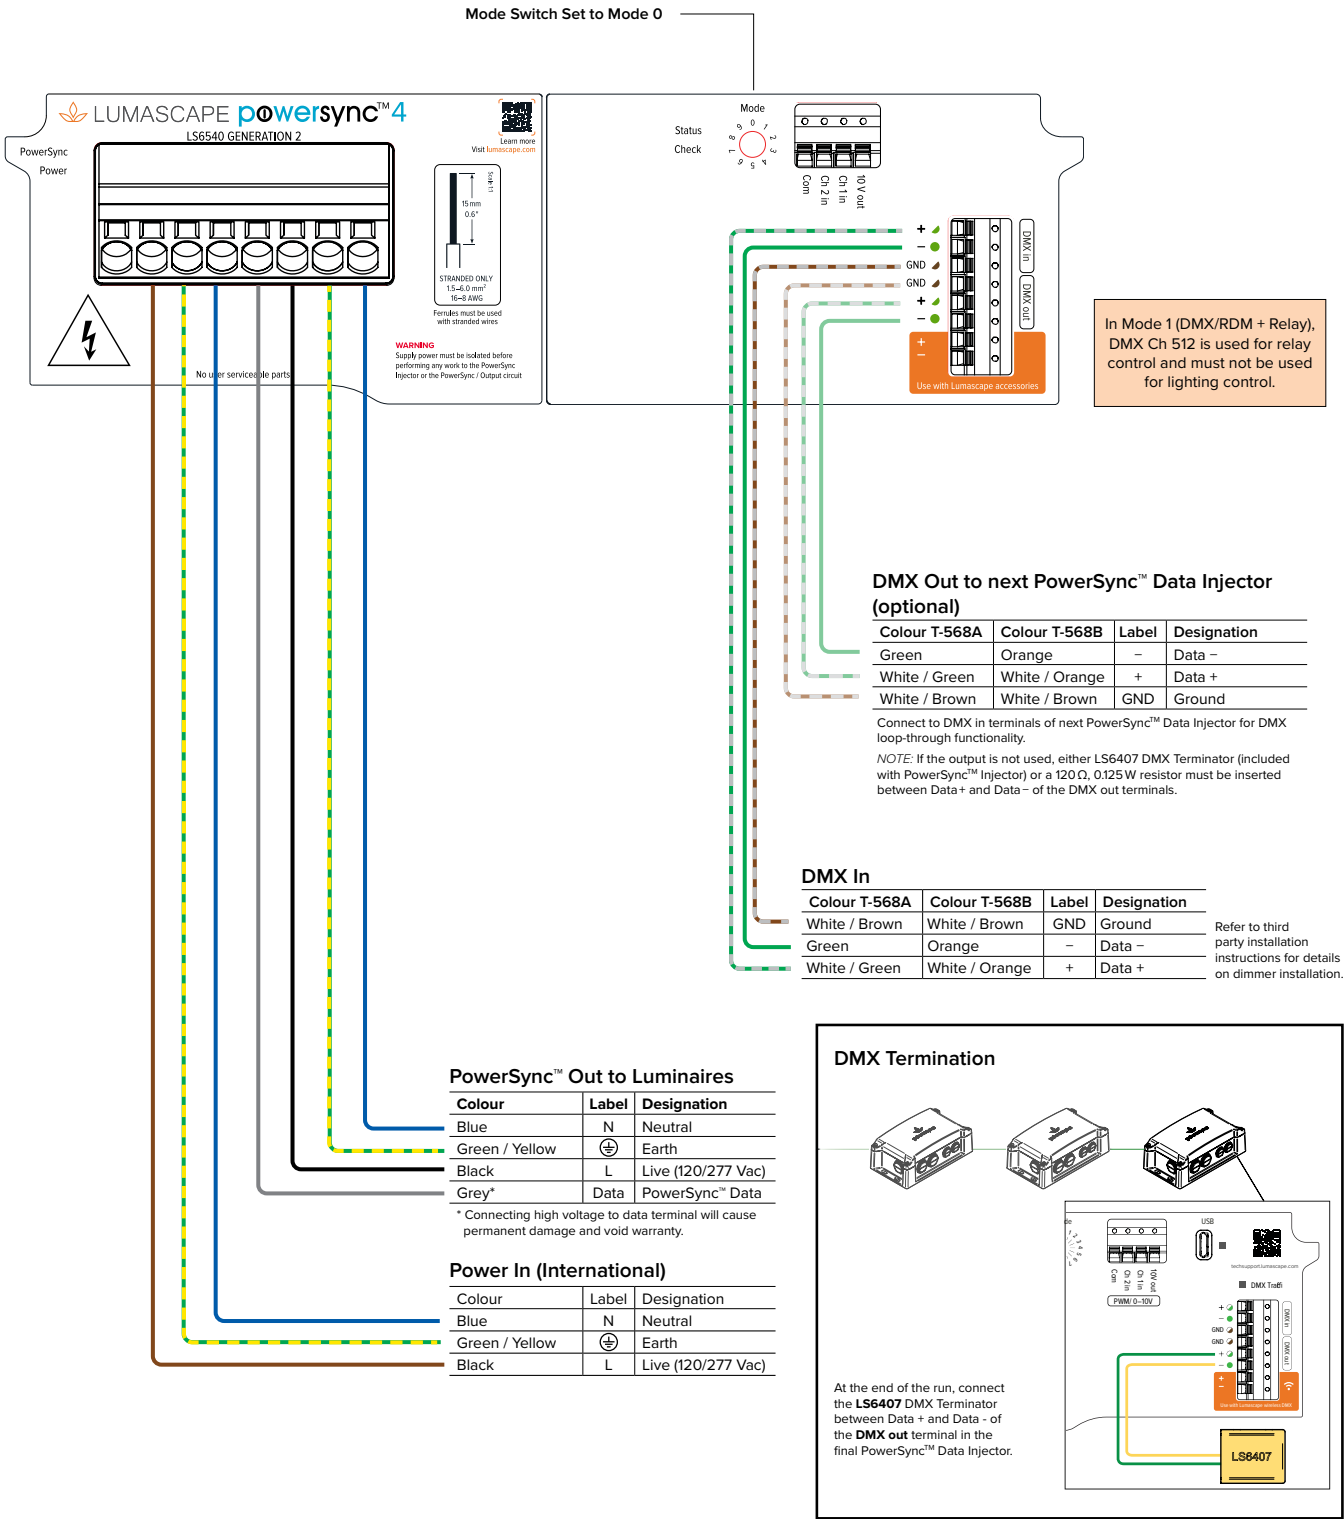

GENERATION 2

Wiring for 0-10 V Sinking Dimmers (International)

10 Position Mode Switch

Label	Descriptions
2	Test All Channels Off
3	Test All Channels On
6	0-10 V Sinking

NOTE:

- This function list is ONLY for Generation 2 PowerSync Injectors.
- For non-generation 2 devices, visit Lumascope website for applicable instructions.
- Generation 2 is marked on the label inside the PowerSync Injector.


0-10 V In from sinking dimmer

Colour	Label	Designation
Grey	Ch 2 In	Channel 2 return (optional)
Grey	Ch 1 In	Channel 1 return
Purple	10 V Out	10 V source



Refer to third party installation instructions for details on dimmer installation.

Mode Switch Set to Mode 6.

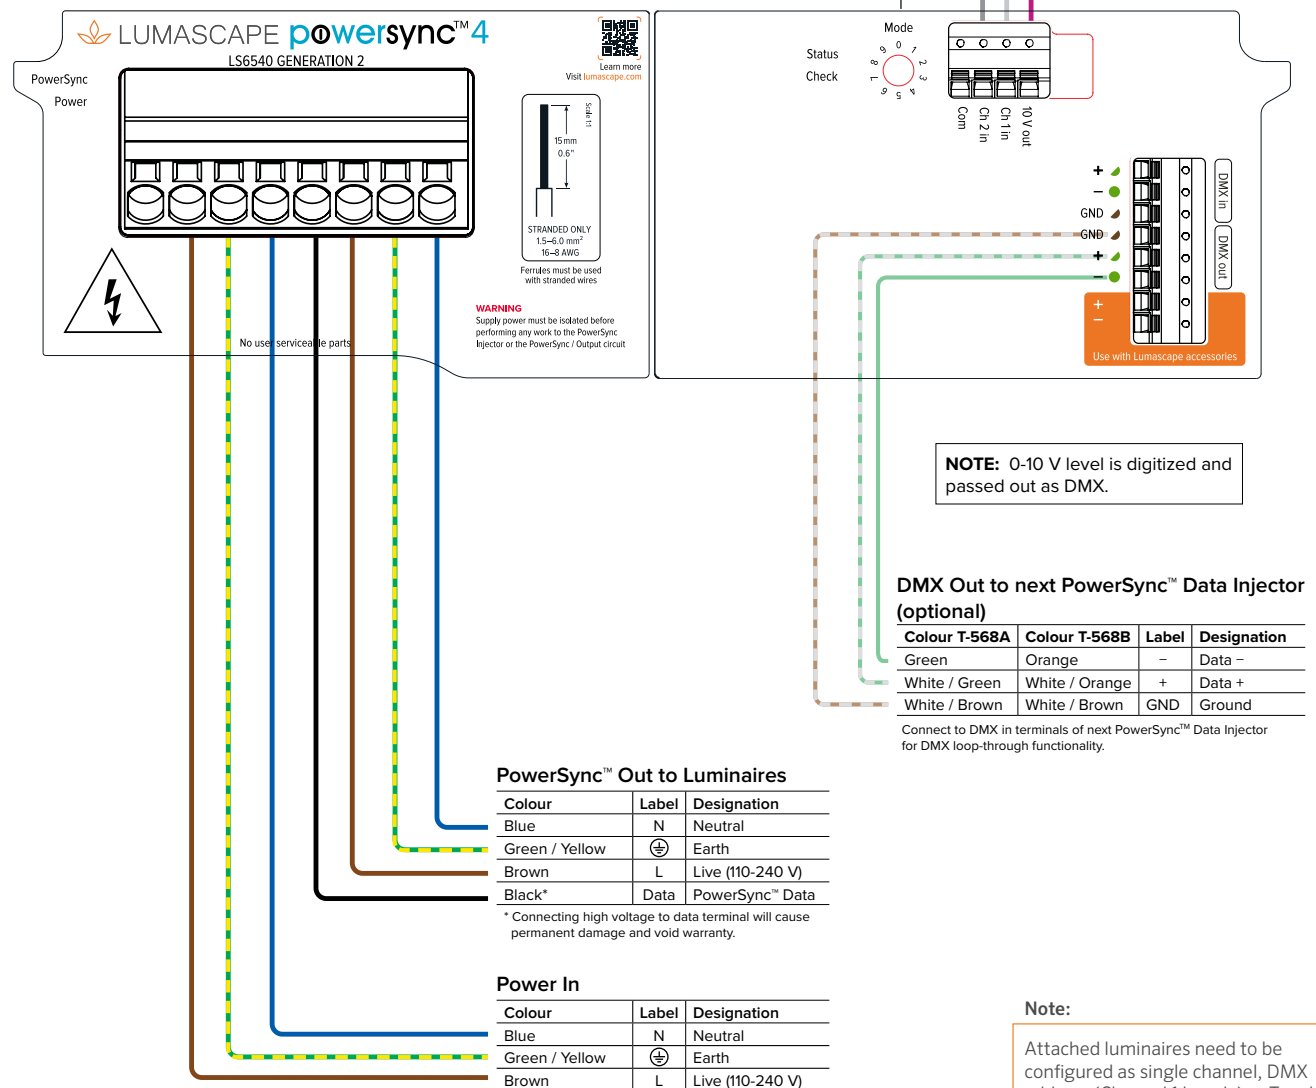

GENERATION 2

Wiring for 0-10 V Sinking Dimmers (North America)

10 Position Mode Switch

Label	Descriptions
2	Test All Channels Off
3	Test All Channels On
6	0-10 V Sinking

NOTE:


- This function list is ONLY for Generation 2 PowerSync Injectors.
- For non-generation 2 devices, visit Lumascape website for applicable instructions.
- Generation 2 is marked on the label inside the PowerSync Injector.

0-10 V In from sinking dimmer

Colour	Label	Designation
Grey	Ch 2 In	Channel 2 return (optional)
Grey	Ch 1 In	Channel 1 return
Purple	10 V Out	10 V source

Refer to third party installation instructions for details on dimmer installation.

Mode Switch Set to Mode 6.

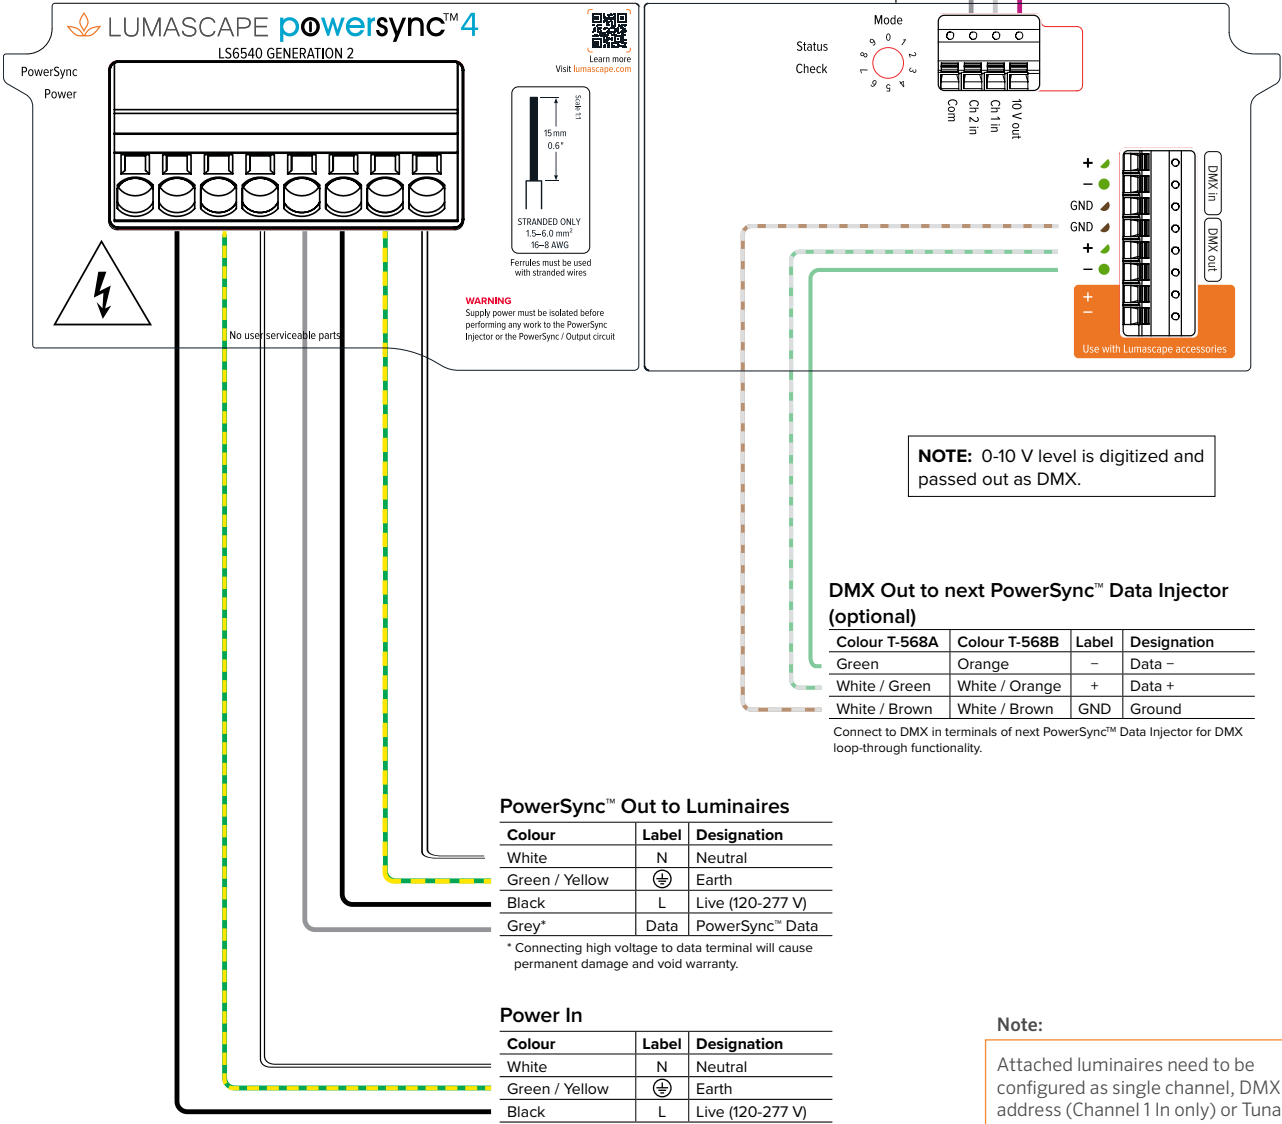

GENERATION 2

Wiring for 0-10 V Sourcing Dimmers (International)

10 Position Mode Switch

Label	Descriptions
2	Test All Channels Off
3	Test All Channels On
5	0-10 V Sourcing

NOTE:


- This function list is ONLY for Generation 2 PowerSync Injectors.
- For non-generation 2 devices, visit Lumascope website for applicable instructions.
- Generation 2 is marked on the label inside the PowerSync Injector.

0-10 V In from sourcing dimmer

Label	Designation
Com	Common –
Ch 2 In	Channel 2 + (optional)
Ch 1 In	Channel 1 +

Refer to third party installation instructions for details on dimmer installation.

Mode Switch Set to Mode 5.

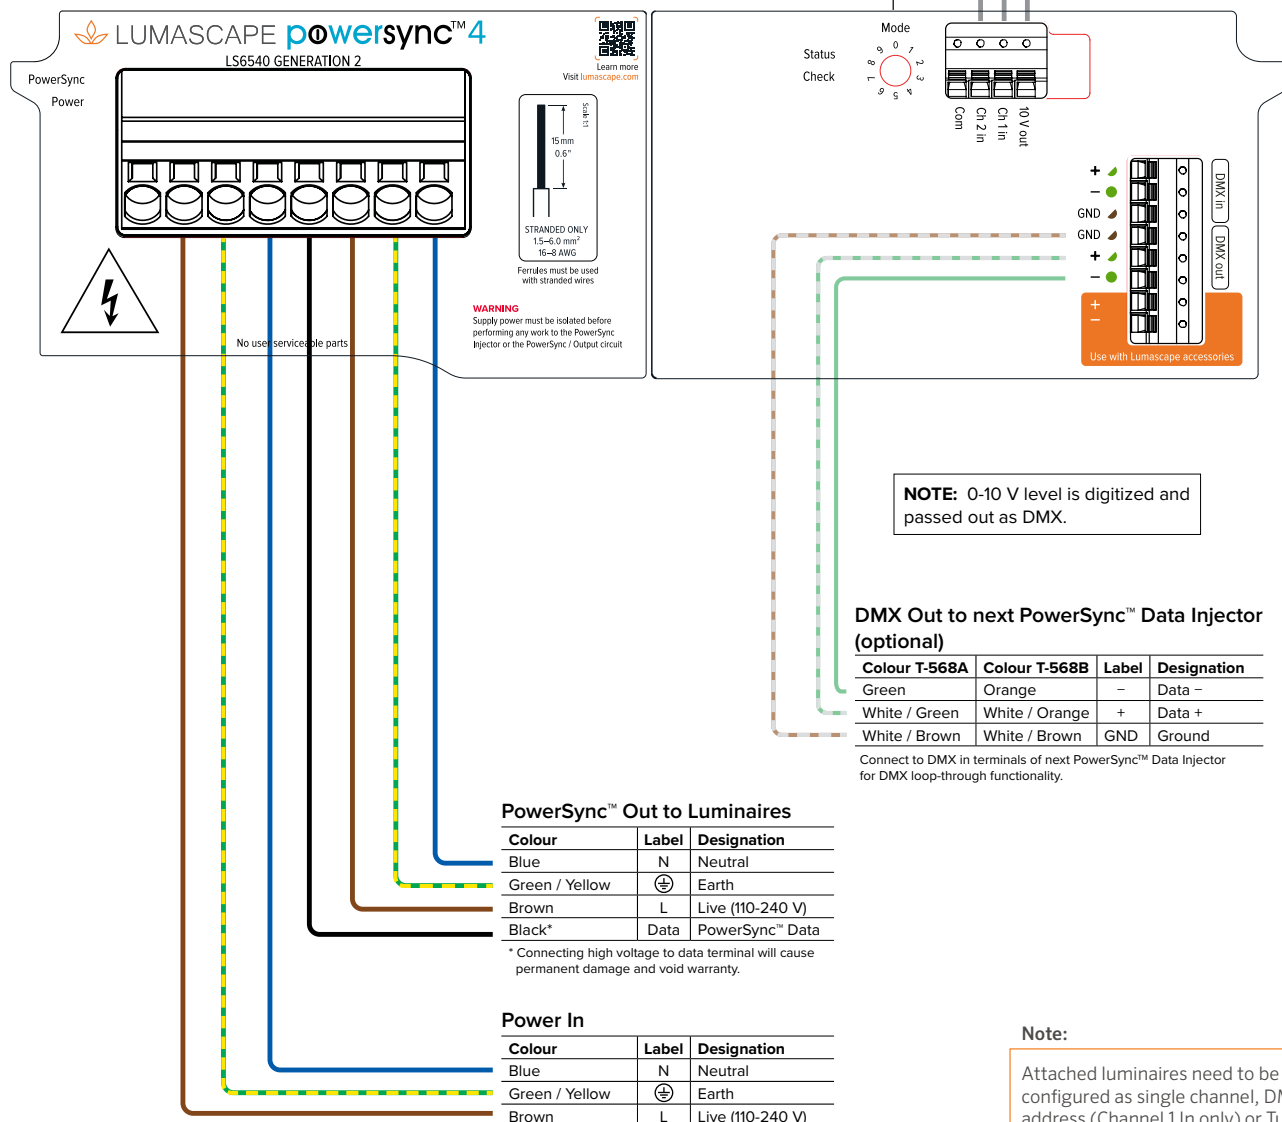

GENERATION 2

Wiring for 0-10 V Sourcing Dimmers (North America)

10 Position Mode Switch


Label	Descriptions
2	Test All Channels Off
3	Test All Channels On
5	0-10 V Sourcing

NOTE:

- This function list is ONLY for Generation 2 PowerSync Injectors.
- For non-generation 2 devices, visit Lumascape website for applicable instructions.
- Generation 2 is marked on the label inside the PowerSync Injector.

0-10 V In from sourcing dimmer

Label	Designation
Com	Common -
Ch 2 In	Channel 2 + (optional)
Ch 1 In	Channel 1 +

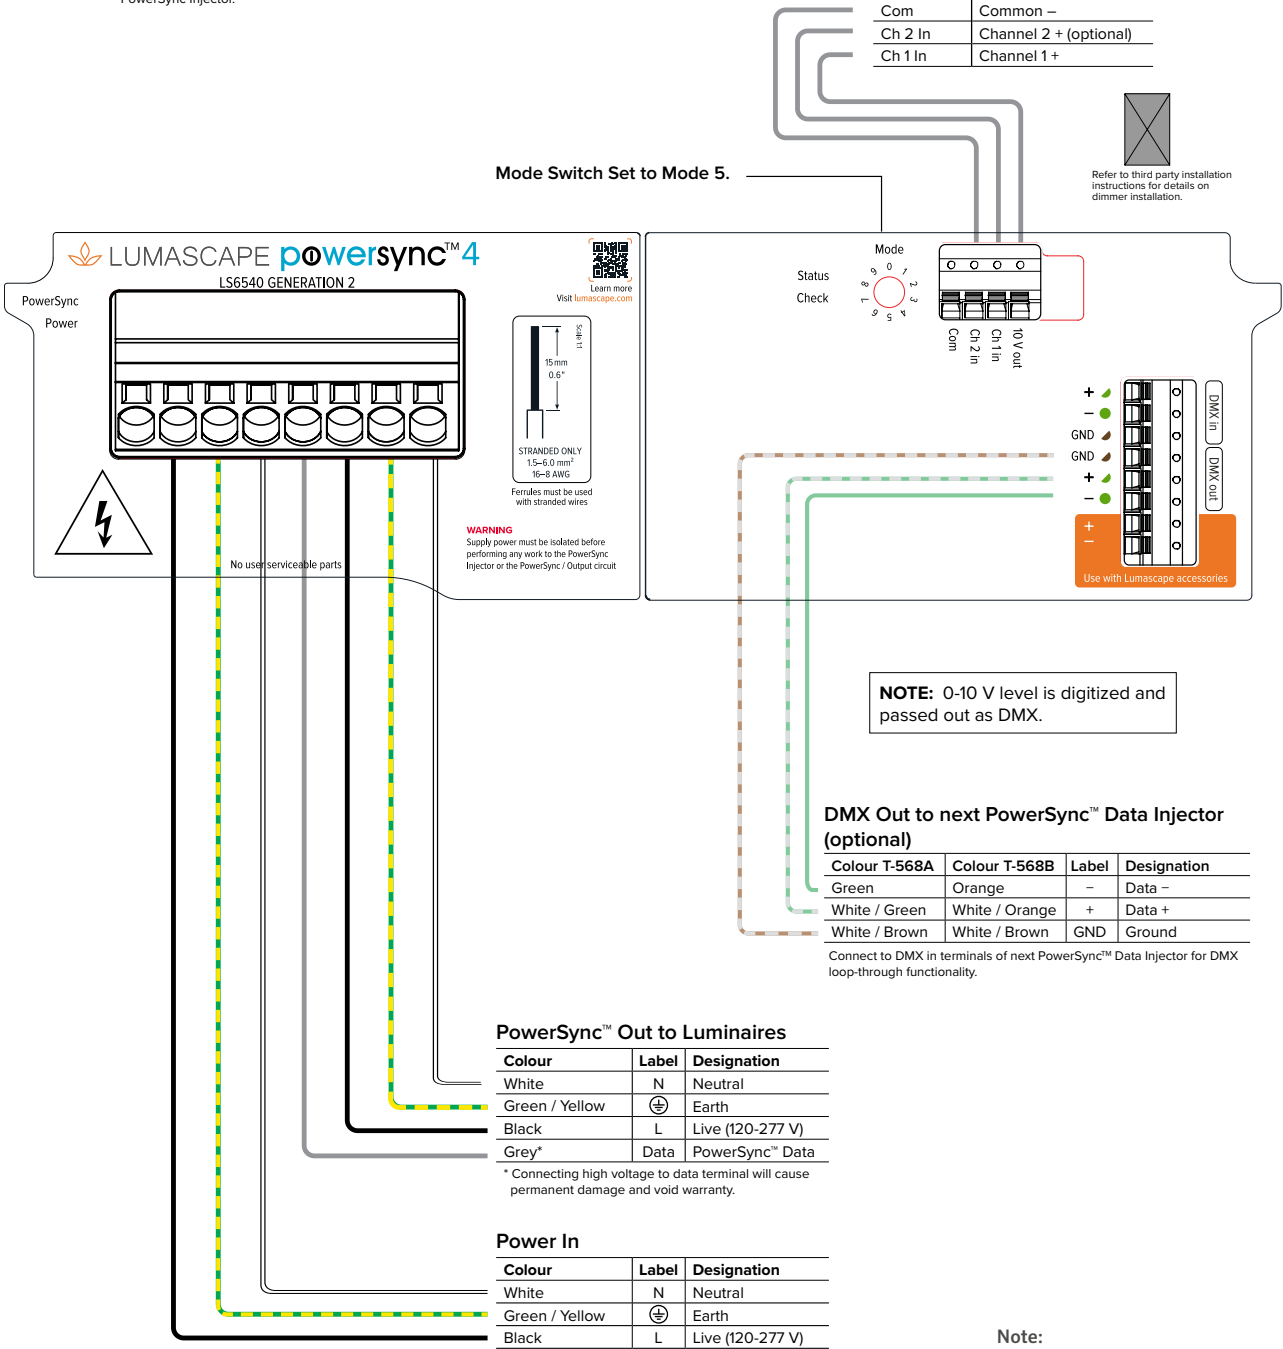

Note:

Attached luminaires need to be configured as single channel, DMX address (Channel 1 In only) or Tunable White (Channel 1 In & Channel 2 In).

GENERATION 2

Testing Functions

To assist with installation, the **LS6540** provides three (3) test modes for PowerSync™ luminaires. These require only connected luminaires and power, and no connected input signal.

If an input signal is connected, the **LS6540** will not respond to this signal in any of the modes below.

NOTE: These test signals apply to the relevant unit's PowerSync™ output only — it will not be passed through on the DMX / RDM connectors if multiple **LS6540** units are connected.

10 Position Mode Switch

Label	Descriptions
0	DMX/RDM
1	DMX/RDM + Relay
2	Test All Channels Off
3	Test All Channels On
4	Test 4 Color Cycle
5	0-10 V Sourcing
6	0-10 V Sinking
7	CRMV (Optional)
8	USB
9	Firmware Update

TEST MODES


NOTE:

- This function list is ONLY for Generation 2 PowerSync Injectors.
- For non-generation 2 devices, visit Lumascape website for applicable instructions.
- Generation 2 is marked on the label inside the PowerSync Injector.


GENERATION 2

Network Topology – PowerSync Dimmable

PowerSync™ Topology 1 - Single Trunk Cable

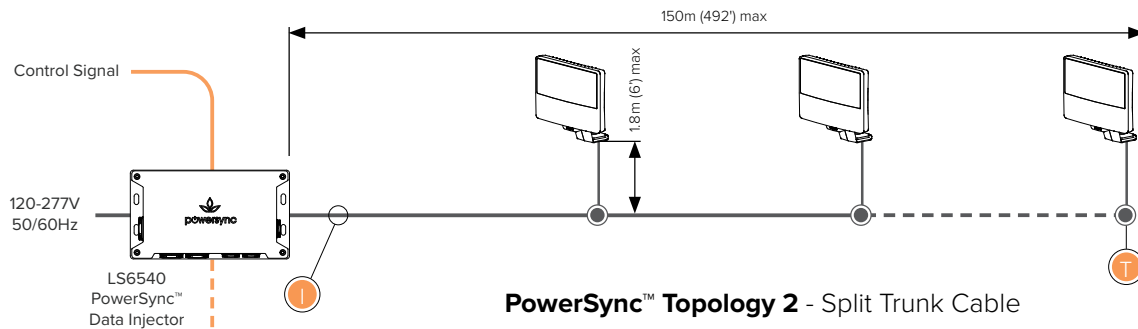

PowerSync™ Topology 2 - Split Trunk Cable

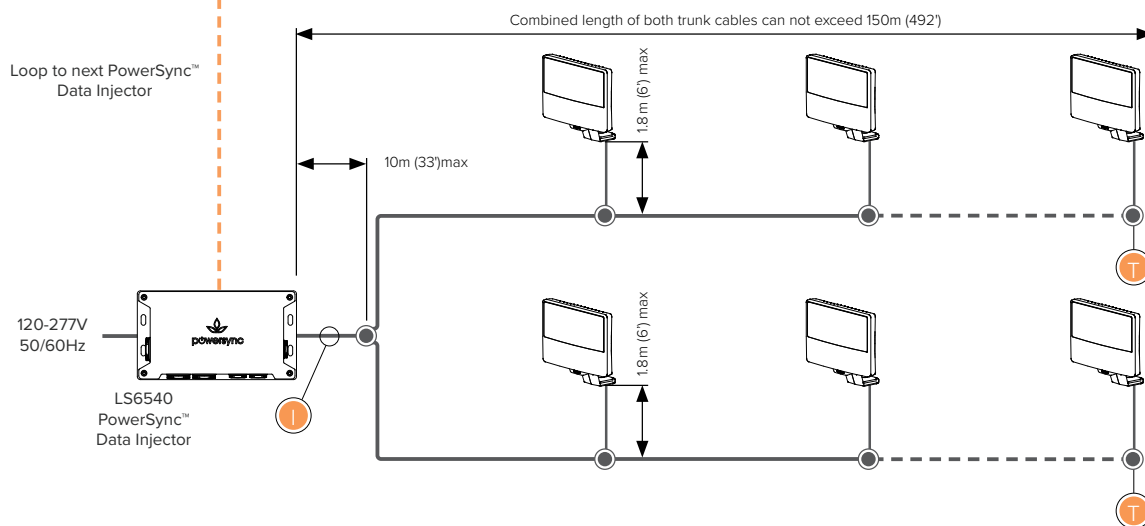

Up to 45 luminaires per run under the following conditions:

- Max total cable run length 150m (492') in up to two trunk cables
- For run lengths in excess of 30m (100'), the data wire gauge cannot exceed 12-14 AWG (2.5mm²)
- For run lengths up to 30m (100'), the data wire gauge is not governed
- Refer to 'Maximum Circuit Load' table for circuit limitations
- Always observe local electrical codes for branch circuit current limitations

Terminator

Use PowerSync™ terminator, supplied with leader cable to terminate last luminaire in chain.

Maximum Current

≤16.0A through LS6540 Data Injector.

Connection Type



Circuits can be configured as either connectorised or hardwired. For details consult installation instructions and comply with local electrical codes.

PLEASE CHECK LUMINAIRE DATASHEETS FOR CIRCUIT LOADING AND ELECTRICAL LIMITATIONS.



GENERATION 2

Network Installations

International

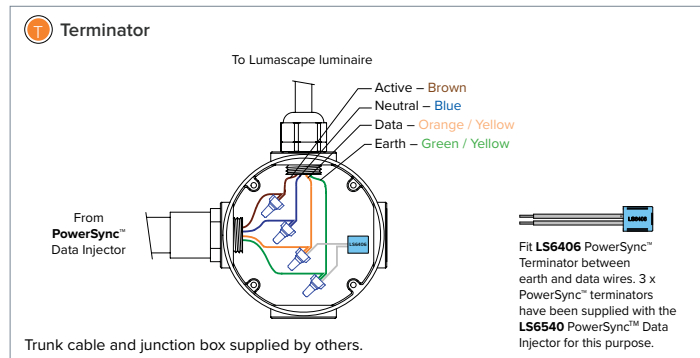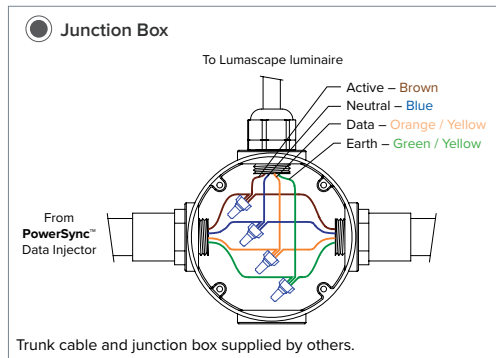

North America

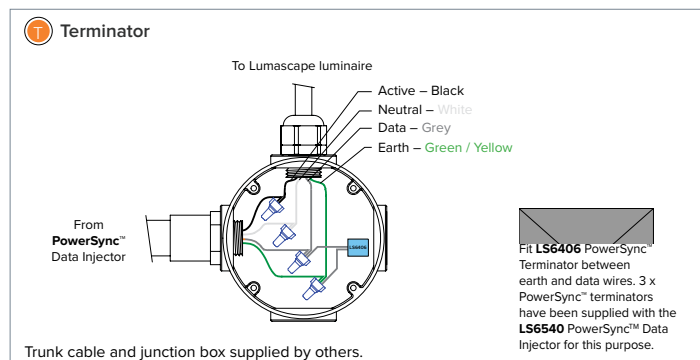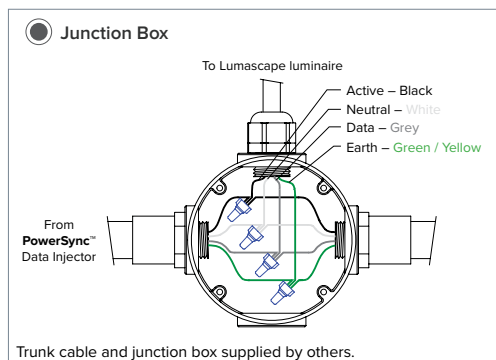

Please Note: The above diagrams are intended to show electrical pathways between luminaires and ancillary device. These diagrams are not intended to show type or colour of cord / wire, luminaire input voltage rating, wire gauge or approved use of the cord / wire supplied with luminaires.